



Accessing Power On/Off Settings for 4K in Ocea Pro 28"/ 32"/ 40"/ 50"/ 75": User's Guide V.3.4

Step 1 Locate and press the "Source" button on the remote.

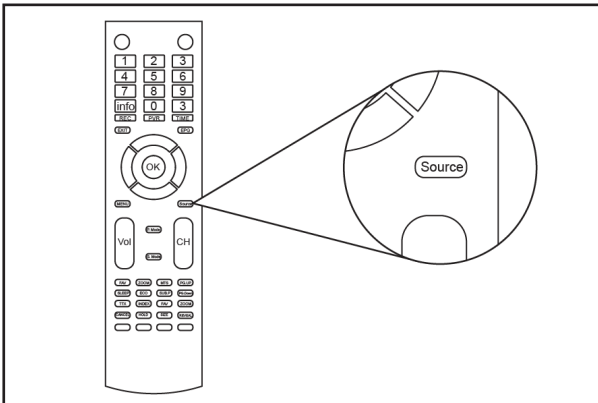


Step 2 Access the input source menu, located in the upper right portion of your screen, and highlight HDMI1 option. Please do not press select.

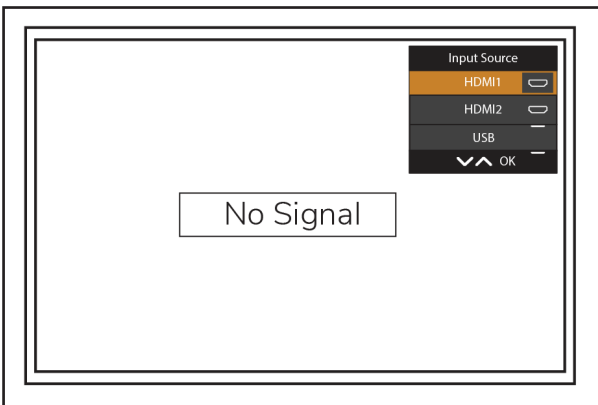


i In the event that the HDMI1 button is inadvertently pressed, kindly press the "Exit" button and repeat step 2.

Step 3 Enter the sequence 2-0-0-8 on the remote to access the "Design setting".

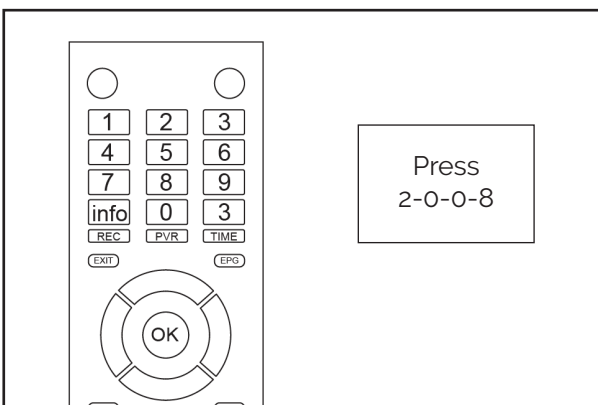


Accessing Power On/Off Settings for 4K in Ocea Pro 28"/ 32"/ 40"/ 50"/ 75": User's Guide V.3.4

Step 4 Navigate to "USER SET" menu within the "Design Setting" and select it by pressing "OK".

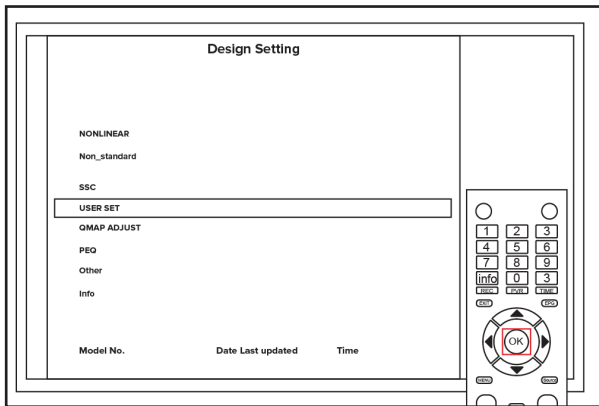

Step 5 Select "Power" within the "USER SET" menu and use the right arrow button on the remote control to switch the mode to "off".

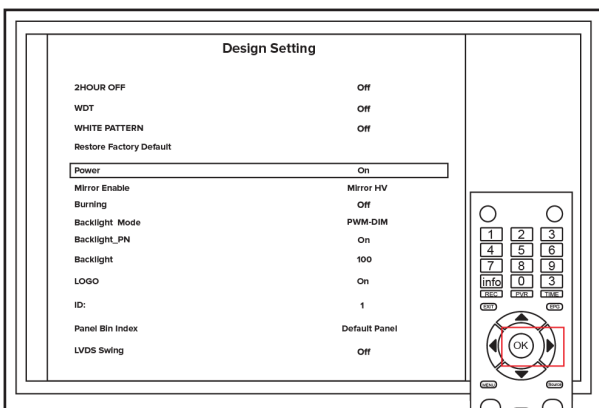

Step 6 Press the right arrow button twice or until the power settings (located at the bottom of the screen) switch to "off".

