

User's Guide on How to Replace TV Panel wires of Ocea PRO



Step 1 Place the Ocea TV on a flat surface. Unscrew as illustrated in the image below, using an L-key.



⚠ HAZARDOUS VOLTAGE. Contact will cause electric shock or burn.

Turn off and lock out system power before servicing.


i Store screws properly after removal to prevent misplacement. Misplacing the screws may cause difficulty in reassembling the TV.

Step 2 Once all screws have been removed, cautiously detach and take off the back cover of the TV. Next, locate the panel wires as depicted in the picture.



⚠ Exercise caution to avoid damaging any internal components or wiring during this process.

Step 3 Gently remove the old wires from the internal components and replace them with new wires of the same size and specifications. Ensure that the new wires are firmly and securely connected to prevent any loose connections.

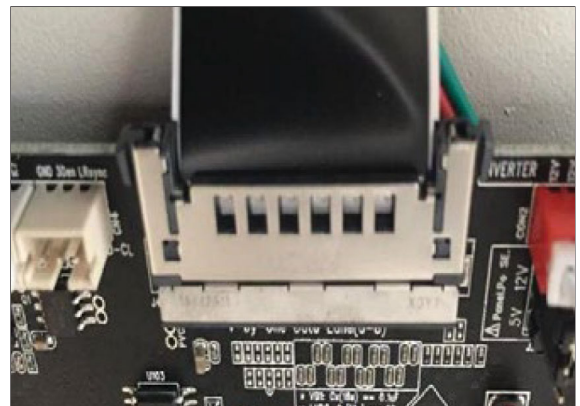

Step 4 Once the wires have been replaced, carefully reattach the back case onto the TV and secure it with the screws.